


Changing the Fuses

- 1 Turn off the system.
- 2 Remove the power plug from the wall receptacle and unplug the cord from the system's main power receptacle.
- 3 Locate the electrical input module, which is adjacent to the main power receptacle.
- 4 Unlock the electrical input module cover by inserting a small flathead screwdriver into the slot. Gently push against the locking tab until the lock releases. Remove the fuse cover.

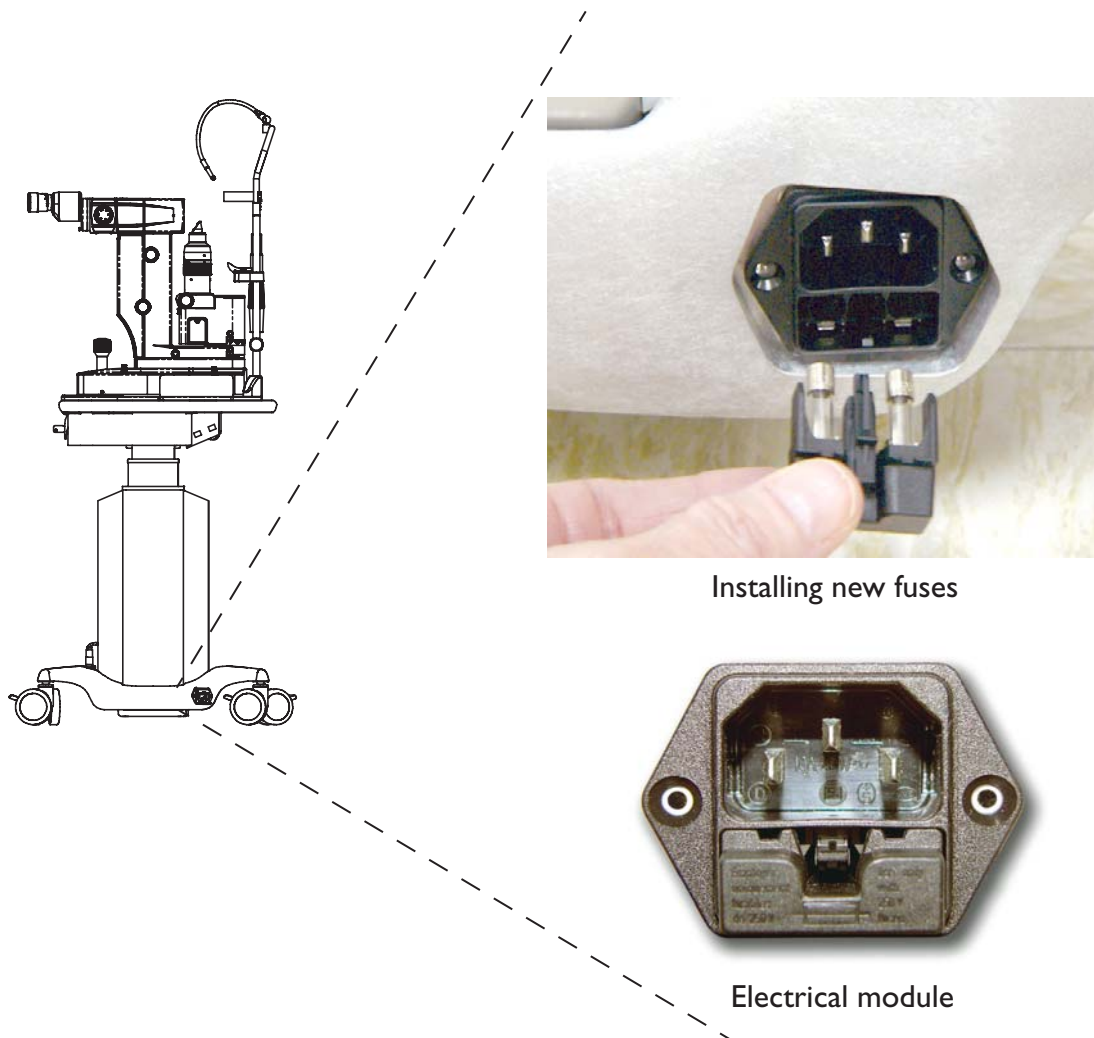

Changing the fuses